



115 Bandsaw

Operation Manual



Chester UK Ltd
Clwyd Close
Hawarden Industrial Park Hawarden
Chester CH5 3PZ
Tel: 01244 531631
sales@chestermachinetools.com
www.chestermachinetools.com

SAFETY

1. Know your band saw. Read the operator's Manual carefully. Learn the operations, applications and limitation.
2. Use recommended accessories. Improper accessories may be hazardous.
3. Wear proper apparel.
4. Keep unnecessary people away.
5. Don't overreach or stand on tool.
6. Avoid dangerous environment. Don't use band saw in damp or wet locations. Keep work area well lighted.
7. Keep work area clean. Cluttered and slippery floors invite accidents.
8. Remove adjusting keys and wrenches from band saw before turning on power.
9. Avoid accidental starting. Mark sure switch is off before plugging in power cord.
10. Don't force band saw. It is safe to operate at the cutting rate for which it was designed.
11. Be specially careful while using band saws in vertical position to keep fingers and hands out of the path of blade, both above and beneath the table.
12. Never hand hold the material with saw in horizontal position. Always use the vise, clamp securely.
13. Keep belt guard and wheel covers in place and in working order.
14. Support long, heavy work from the floor.
15. Always remember to switch off the machine when the work is completed.
16. Disconnect power cord before adjusting. Servicing and changing blade.
17. Check damaged parts. Damaged parts must be replaced or repaired.
18. Moving parts should keep in alignment. All adjustments are to be made with power disconnected.
19. Use a sharp blade and keep tool clean for best and safest performance.
20. Safety is a combination of operator's common sense and alertness at all times when the saw is functioning.
21. Keeping the band saw in top condition is essential for safety.

FEATURES

1. Special designed horizontal and vertical band saw.
2. Offers three speeds for cutting metal plastic or wood.
3. Shuts off automatically when material is cut.
4. With scale for the mitering vise.
5. No noise while operating.
6. Casters (optional) quick and easy moving.

SPECIFICATION

1. Capacity: at 90° 100mm round
100mmx150mm rectangular
at 45° 60mm round
60mmx100mm rectangular
2. Speeds: 80-120-200 FPM 60HZ (65-95-165 FPM 50HZ)
3. Motor: 1/3HP or 1/2HP 1700 RPM 60HZ (1400RPM 50 HZ)
4. Blades: 60 1/4"x1/2"x1/40"(1530mmx13mmx0.6mm)
5. Blades wheels: 7³/₈" (187mm) High strength flanged cast iron.

1580

ASSEMBLY

1. Assemble stand legs on Band Saw Base. See assembly diagram
2. Assemble handle vice wheel, tighten set screw.

BLADE GUIDE BEARING ADJUSTMENT

This is the most important adjustment on your saw. It is impossible to get satisfactory work from your saw if the blade guides are not properly adjusted. The blade guide bearings for your Metal cutting Band saw are adjusted and power tested with several test cuts before leaving the factory to insure proper setting. The need for adjustment should rarely occur when the saw is used properly. If the guides get out of adjustment, it is extremely important to readjust immediately. If proper adjustment is not maintained, the blade will not cut straight and if the situation is not corrected, it will cause blade damage.

Because guide adjustment is a critical factor in the performance of your saw, it is always best to try a new blade to see if this will correct poor cutting before beginning to adjust the bearings. If a blade becomes dull on one side sooner than the other, for example, it will begin cutting crooked. A simple blade change should correct this problem-the more difficult guide adjustment will not.

If a new blade does not correct the problem, check the blade guides for proper spacing.

There should be 0.001" clearance between the 0.025" thickness blade and guide bearing. To obtain this clearance adjust as follows:

1. The inner guide bearing is fixed and cannot be adjusted.
2. The outer guide bearing is mounted to an eccentric bolt and can be adjusted.
3. Loosen the nut while holding the bolt with a wrench.
4. Position the eccentric by turning the bolt to the desired position of clearance.
5. Tighten the nut
6. Adjust the second blade guide bearing in the same manner.
7. The back edge of the blade should just touch the lip of the Blade Guide Bearing.

BLADE GUIDE ASSEMBLY ADJUSTMENT

The Metal Cutting Band Saw is equipped with two adjustable blade guide assemblies. This feature will permit you to adjust the position of the blade guide for various widths work pieces.

To effect the most accurate cut and prolong the life of the blade. The blade guide assemblies should be adjusted to just clear the piece to be cut. This is done as follows:

1. Place the work piece in the vise of band saw and clamp tightly.
2. Adjust catch blade guide assembly to the desired position by loosening the hand knobs and positioning the guides required.
3. Tighten the hand knobs.

ADJUSTING BLADE TENSION

1. Make sure the motor is shut off.
2. Press the blade lightly with Left hand, make the rear blade against the flange of blade wheel and test the blade tension.



Figure (1) Adjusting Blade Tension

- Adjust the blade tension adjustable knob with the right hand until the blade obtains the proper tension.

CHANGING SPEED

- When using your Band Saw, always change the blade speed to best suit the material being cut. Cutting chart is shown in figure (2).
- Cut off power. Open the pulley guard cover. Loosen the lead screw (#98), you are now able to change the position of the belt to gain the desired speed. Check the belt tension as instructed before. When the tension the belt is well adjusted, lock the motor firmly. Close the pulley guard cover.

MATERIAL CUTTING CHART

Material, Stainless or Alloy Steel, Bearing Bronzes/Mild Steel, Hard Brass or Bronze Soft Brass/Aluminum Other light materials	Speed (SFM)	Belt Groove Used	
	60Hz	I Motor Pulley	I Saw Pulley
	80FPM	Small	Large
	120FPM	Medium	Medium
	200FPM	Large	Small

Figure (2) Material Cutting Chart

BLADE SELECTION

- Special note: 1(1/2" x 0.025"x 6@¹/₂min, 65¹/₂max) tooth per inch general use blade is furnished with the metal cutting Band Saw. Additional blades in 10 and 14 tooth sizes are available.
- The choice of blade pitch is governed by the thickness of the work to be cut; the thinner the work piece, the more teeth advised. A minimum of 3 teeth should be in the work piece at all times for proper cutting.
- If the teeth of the blade are so far apart that they straddle the work, server damage to the work piece and to the blade can result.

CHANGING BLADE

Raise saw head to vertical position. Loosen blade tension adjustable knob sufficiently to allow the saw blade to slip off the wheels. Install the new blade as follows:

- Place the blade in between each of guide bearing.
- Slip the blade around the motor pulley (bottom) with left hand and hold in position.
- Hold the blade taut against the motor pulley by pulling the blade upward with the right hand which is placed at the top of the blade.
- Remove left hand from bottom pulley and it s the top side of the blade to continue the application on the upward pull on the blade.
- Remove right hand from blade and adjust the position of top pulley to permit left hand to slip the blade around the pulley using the thumb, index and little finger as guides.

6. Adjust the blade tension knob clockwise until it is just right enough so no blade slippage occurs.
Do not tighten excessively.
7. Place 2-3 drops of oil on the blade.
8. Replace the blade guard.

ADJUSTING THE BLADE TRACKING

This adjusting has been completed and power-tested at the factory. The need for adjusting should rarely occur when the saw is used properly. If the tracking goes out of adjusting is listed below:

Step 1: Turn simultaneously with adjusting set screw to make the blade track against the shoulder of the pulley.

To relieve blade tension

Step 5: Adjust the blade adjustable seat according to the material size.

The arrow indicates the moving direction

Step 6: Adjust guide assembly to where the blade just touches the back-up bearing.

/

To increase blade tension

Step 2: Loosen this hex. Head screw-before turning the adjusting set screw.

Step 4: Tighten after adjusting

Step 3: Turn simultaneously with blade tension knob to make blade track against shoulder of pulley

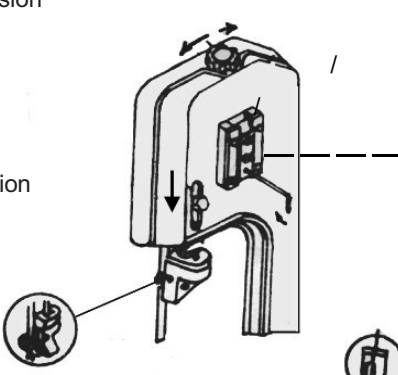


Figure (3)

HORIZONTAL CUTTING OPERATION

Before operating, please read instruction manual and examine every part including speed, Blade selection, guide assemble position, etc. Operation is as follows:

WORK SET UP

1. Raise the saw head to the vertical position.
2. Open the vise to accept the piece to be cut by rotating the wheel at the end of base (counter clockwise).
3. Place the work piece on the saw bed. If the price is long, support the end.
4. Clamp the work piece securely in the vise by rotating the hand wheel clockwise.

CUTTING

Close switch, letting the head down slowly onto the work, Do not drop or force. Let the weight of the saw head provide the cutting force. The saw automatically shuts off at end of the cut.

Method of adjusting blade:

- A. Loosen the screw #11.
- B. Adjust the blade adjustable seat #64 to make the blade vertical to bed.
- C. Place the square on the bed to check if the blade is vertical, if not, repeat the process A to C.
- D. Tighten the screw #11.

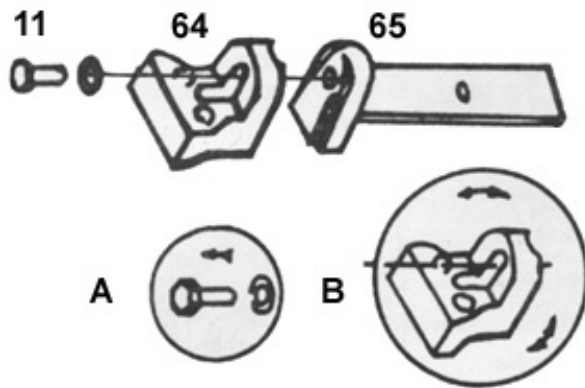



Figure (4)
Adjusting the blade

LUBRICATION

Lubricate the following components using lubricant, L-HV32

1. Ball bearing -none.
2. Blade guide bearing-none
3. Driven wheel bearing-none.
4. Vise lead screw- as needed.
5. The driven gears run in the bath and will not require a lubricant change more than then once a year. When needing a change, first put down the bead to a Horizontal position, then loosen 4 screw (#75) of the gear box open the cover (#93). Placing a pan under the tight lower corner of the gear box, slowly raise the head until the oil flows out, Lower corner of the gear box, slowly raise the head until the oil flows out, Lower head. Then wipe up excess oil and foreign matter with soft rags. Then add lubricant into the box until it is full and not flow over. Close the cover, tighten 4 screws.

THE VERTIACAL CUTTING PLATE ASSEMBLY DRAWING.

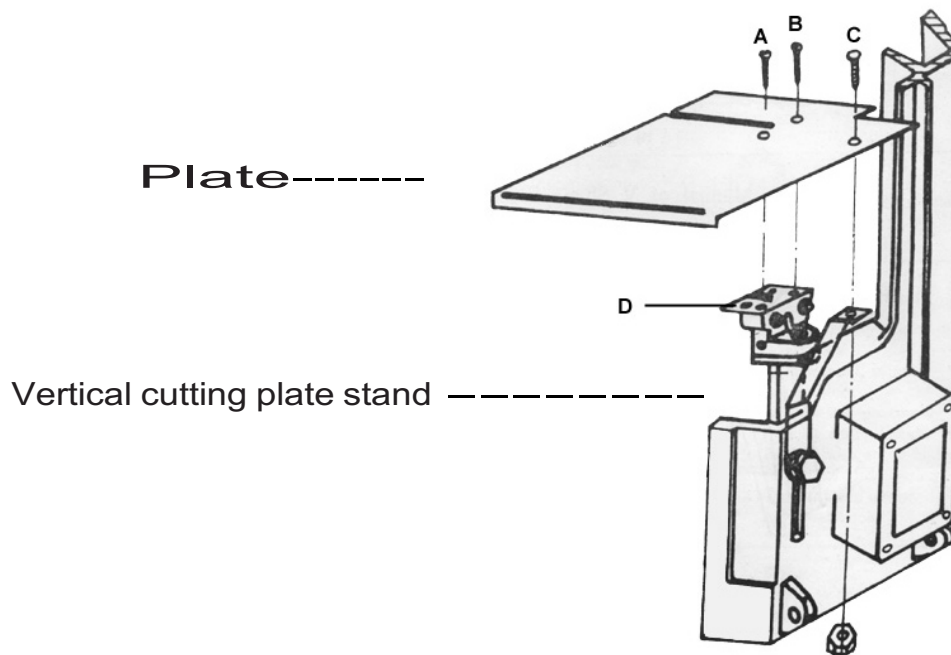


Steps for assembling:

1. Loosen the A.B.C. three screws from the blade guide. And take away the part "D"
2. To lock the vertical cutting plate stand on the valve.
3. To put the plate on the guide and vertical cutting plate stand, then lock the A.B.C. three screws.
4. Please operate the vertical cutting.
5. Use the miter gauge in the work table grooves to obtain any angle up to 45 degree either left or right.


CAUTION-The use of any other accessories may be hazardous.

CAUTION-Always use push sticks particularly when cutting small pieces.

WIRING DIAGRAM

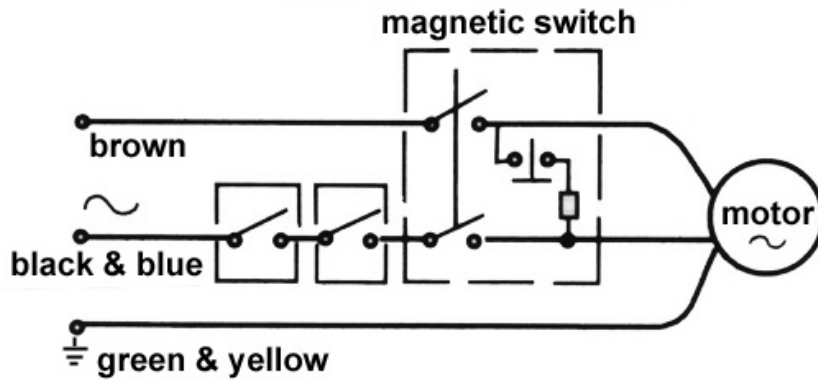

The manual of V shape fixed plate

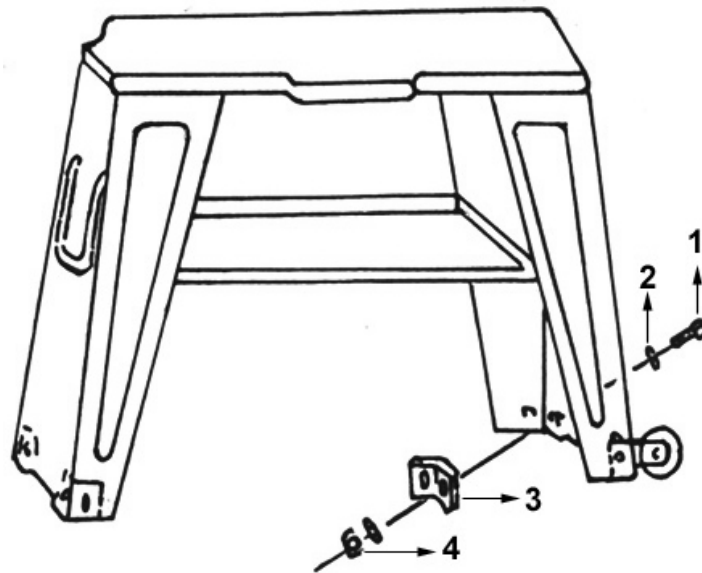

1. Hexagon head screw	8PCS
2. Washer	16PCS
3. V. shape fixed plate	4PCS
4. Hexagon nut	8PCS

TROUBLE SHOOTING CHART

Symptom	Possible Cause (s)	Corrective Action
<p>Excessive Blade Breakage</p>	<ol style="list-style-type: none"> 1. Material loose in vise 2. Incorrect speed or feed 3. Blade teeth spacing too large 4. Material too coarse 5. Incorrect blade tension 6. Teeth in contact with material before saw is started 7. Blade rubs on wheel flange 8. Misaligned guide bearings 9. Cracking at weld 	<ol style="list-style-type: none"> 1. Clamp work securely 2. Adjust speed or feed 3. Replace with a small teeth spacing blade 4. Use a blade of slow speed and small teeth spacing 5. Adjust where blade just does not slip on wheel 6. Place blade in correct with work after motor is started 7. Adjust wheel alignment 8. Adjust guide bearings 9. Weld again, note the weld skill
<p>Premature Blade Dulling</p>	<ol style="list-style-type: none"> 1. Teeth too coarse 2. Too much speed 3. Inadequate feed pressure 4. Hard spots or scale on material 5. Work hardening of material 6. Blade twist 7. Insufficient blade 	<ol style="list-style-type: none"> 1. Use finer teeth 2. Decrease speed 3. Decrease spring tension on side of saw 4. Reduce speed, increase feed pressure 5. Increase feed pressure by reducing spring tension 6. Replace with a new blade, and adjust blade tension 7. Tighten blade tension adjustable knob
<p>Unusual Wear on Side/Back of Blade</p>	<ol style="list-style-type: none"> 1. Blade guides worn 2. Blade guide bearings not adjusted properly 3. Blade guide bearing bracket is loose 	<ol style="list-style-type: none"> 1. Replace 2. Adjust as per operators manual 3. Tighten


Symptom	Possible Cause (s)	Corrective Action
Teeth Ripping from Blade	<ol style="list-style-type: none"> 1. Tooth too coarse for work 2. Too heavy pressure, too slow speed 3. Vibrating work piece 4. Gullets loading 	<ol style="list-style-type: none"> 1. Use finer tooth blade 2. Decrease pressure, increase speed 3. Clamp work piece securely 4. Use coarse tooth blade or brush to remove chips
Motor running too hot	<ol style="list-style-type: none"> 1. Blade tension too high 2. Drive belt tension too high 3. Gears need lubrication 4. Cut is binding blade 5. Gears aligned improperly 	<ol style="list-style-type: none"> 1. Reduce tension on blade 2. Reduce tension on drive belt 3. Check oil bath 4. Decrease feed and speed 5. Adjust gears so that worm is in center of gear
Bad Cuts	<ol style="list-style-type: none"> 1. Feed pressure too great 2. Guide bearing not adjusted properly 3. Inadequate blade tension 4. Dull blade 5. Speed incorrect 6. Blade guide spaced out too much 7. Blade guide assembly loose 8. Blade truck too far away from wheel flanges 	<ol style="list-style-type: none"> 1. Reduce pressure by increasing spring tension on side of saw 2. Adjust guide bearing, the clearance can not be greater than 0.001mm 3. Increase blade tension by adjust blade tension 4. Replace blade 5. Adjust speed 6. Adjust guides space 7. Tighten 8. Re-track blade according to operating instructions
Bad Cuts (Rough)	<ol style="list-style-type: none"> 1. Too much speed or feed 2. Blade is too coarse 3. Blade tension loose 	<ol style="list-style-type: none"> 1. Decrease speed or feed 2. Replace with finer blade 3. Adjust blade tension
Blade is twisting	<ol style="list-style-type: none"> 1. Cut is binding blade 2. Too much blade tension 	<ol style="list-style-type: none"> 1. Decrease feed pressure 2. Decrease blade tension

PARTS LIST

Parts No.	Description	Quantity required
1	Hexagon head screw	2
2	Hexagon nut	2
3	Washer	4
4	Floor stand (right)	1
5	Wheel assy (optional)	1
6	Cotter pin	2
11	Hexagon head screw	13
12	Hexagon nut	10
13	Floor stand (left)	1
14	Floor stand handle (optional)	1
15	Adjusting rod	1
16	Electric cord	1
17	Pivoting rod	1
18	Support plate	1
19	Stock stop	1
20	Hexagon socket headless screw	1
21	Stock stop rod	1
22	Wire relief retainer	1
23	Switch	1
24	Hexagon nut	1
26	Switch panel	1
27	Adjusting rod support	1
28	Hand wheel	1
30	Thrust washer	1
32	Lead screw	1
33	Vise nut	1
34	Movable vise plate	1
35	Washer	1
36	Hexagon head screw	1
37	Bed	1
39	Scale	1
40	Electric cord cover	1
43	Rubber ring	2
44	Electric cord	1
45	Nut plate	2
46	Spring adjusting screw	1
47	Spring	1
48	Screw	4
49	Mitering vise plate	1
50	Hexagon head screw	1
51	Washer	5
52	Hexagon head screw	4
53	Hexagon head screw	1
54	Pivot	1
55	Vertical cutting plate	1
56	Vertical cutting plate stand	1
57	Adjustable bracket (left)	1
58	Plum screw	1
59	Blade back safety cover	1
60	Thrust washer	4
61	Bearing	6
62	Guide pivot	4
63	Bearing shaft pin	2
64	Blade adjustable seat	2
65	Adjustable bracket (right)	1
66	Blade roller bearing guide adjustable lock	2
67	Spring washer	2
68	Screw	5

Parts No.	Description	Quantity required
69	Blade guard	1
70	Hexagon nut	4
71	Blade wheel (front)	1
72	Blade wheel bearing cover	1
73	Key	5
75	Hexagon head screw	1
76	Switch cut off tip	1
77	Blade wheel (rear)	1
79	Blade tension adjustable knob	1
80	Spring	1
81	Body frame	1
83	Hexagon head screw	2
84	Motor mount plate	1
85	Motor	1
86	Motor pulley	1
87	Ball bearing	4
88	Bearing bushing	1
89	Oil seal	2
90	Transmission wheel shaft	1
91	Transmission gear	1
92	Gear box gasket	1
93	Gear box cover	1
94	Worm gear	2
96	Bearing bushing	1
98	Plum screw	1
99	Washer	1
100	Screw	6
101	Worm gear pulley	1
103	Blade tension sliding plate	1
104	Hexagon socket headless screw	2
105	Spring pin	1
106	Sliding plate draw block	1
107	Blade wheel shaft	1
108	Shaft block	1
109	Blade tension sliding guides	2
110	Motor pulley cover	1
112	Belt	1
113	Blade	2
114	Washer	2
117	Washer	1
118	Thrust washer	1
120	Bearing	1
121	Round head cross socket screw	1
122	Hexagon nut	3
126	Bushing	1
131	Switch protection bracket	1
132	Blade safe guard	2
134	Screw	4
140	Hexagon nut	4
156	Round head cross socket screw	3
157	Star washer	1
169	Cross socket screw	2
170	Tool plate	1
171	Hexagon head screw	4
172	Hexagon nut	4
173	Washer	4
174	Wheel stand	1
175	Cotter pin	4
176	Axle	1

Part Assembly Drawing

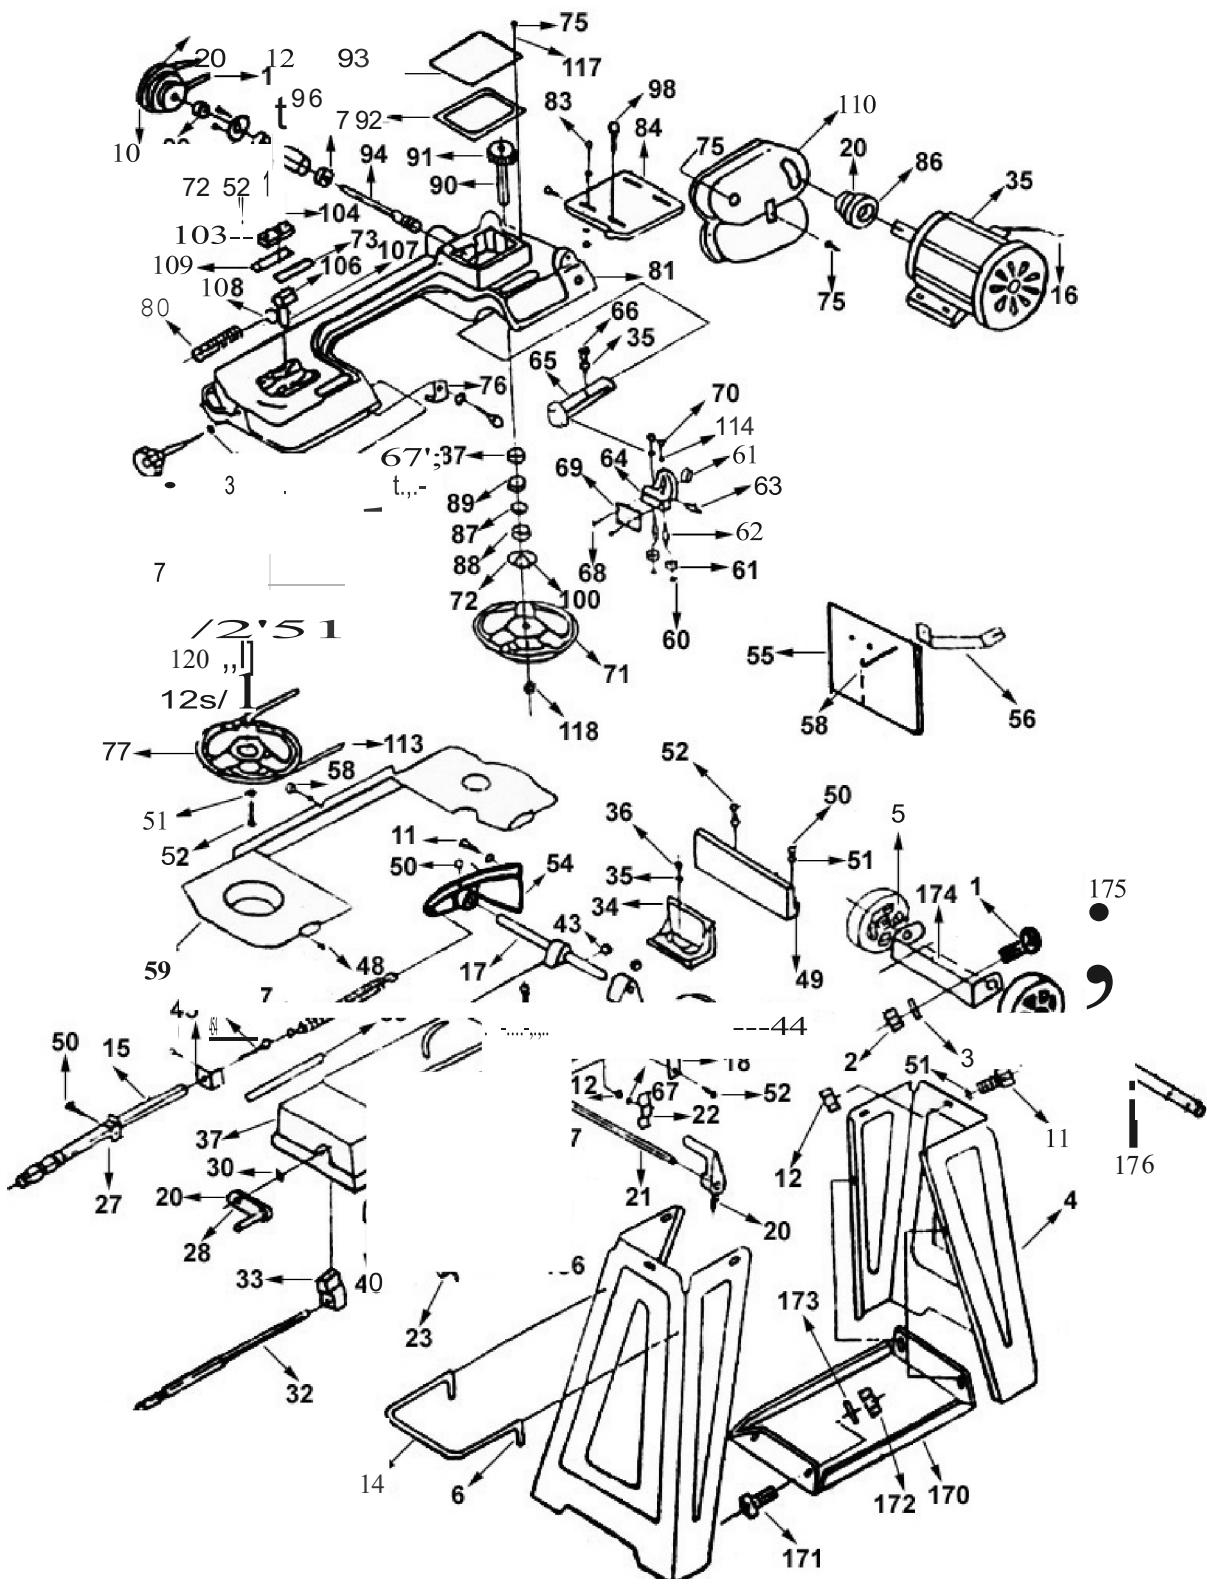

No	Description	Quantity	Notes
1	Main body	1 Set	
2	Legs	1 Set	
3	Leg Handle	1 Pc	
4	Motor	1 Set	
5	Motors Driving Pulley	1 Pc	
6	Belt Covers	1 Set	
7	Belt	1 Pc	
8	Vertical Cutting Plate	1 Pc	
9	Vertical Cutting Plate Stand	1 Pc	
10	Stock Stop Rod	1 Pc	
11	Stock Stop	1 Pc	
12	Wheel Stand	1 Pc	
13	Wheel Stand Axle	1 Pc	
14	Wheel	2 Pcs	
15	Tool Shelf	1 Pc	
16	Fasteners	1 Set	
17	Instruction	1 Copy	
18	Packing List	1 Copy	

Note: This manual is only for your reference. Owing to the continuous improvement of the machine, changes may be made at any time without obligation on notice. And please note the local voltage while operating this electric machine.